

 
CREATING Safer homes together

WE ALL WANT OUR HOMES TO BE A SAFE PLACE. WHEN WE WORK TOGETHER, WE CAN REDUCE THE RISK OF ACCIDENTS.

Every two weeks, a child dies in the U.S. from furniture, appliances or TV's tipping over, according to the U.S. Consumer Product Safety Commission. By working together, we can help prevent these tragedies and make the home a safer place.

- Secure it! Furniture must be securely attached to the wall. Use the tip-over restraint provided with the product and the right hardware for your wall type. Consult the enclosed guide for help with hardware.
- Never put a TV or other heavy objects on top of a chest of drawers or any furniture not intended for use with a TV.
- Place heavy objects in the lowest drawers.
- Never let children climb or hang on drawers, doors or shelves.

Visit www.IKEA-USA.com/saferhomestogether for more information and to view a tip-over prevention video

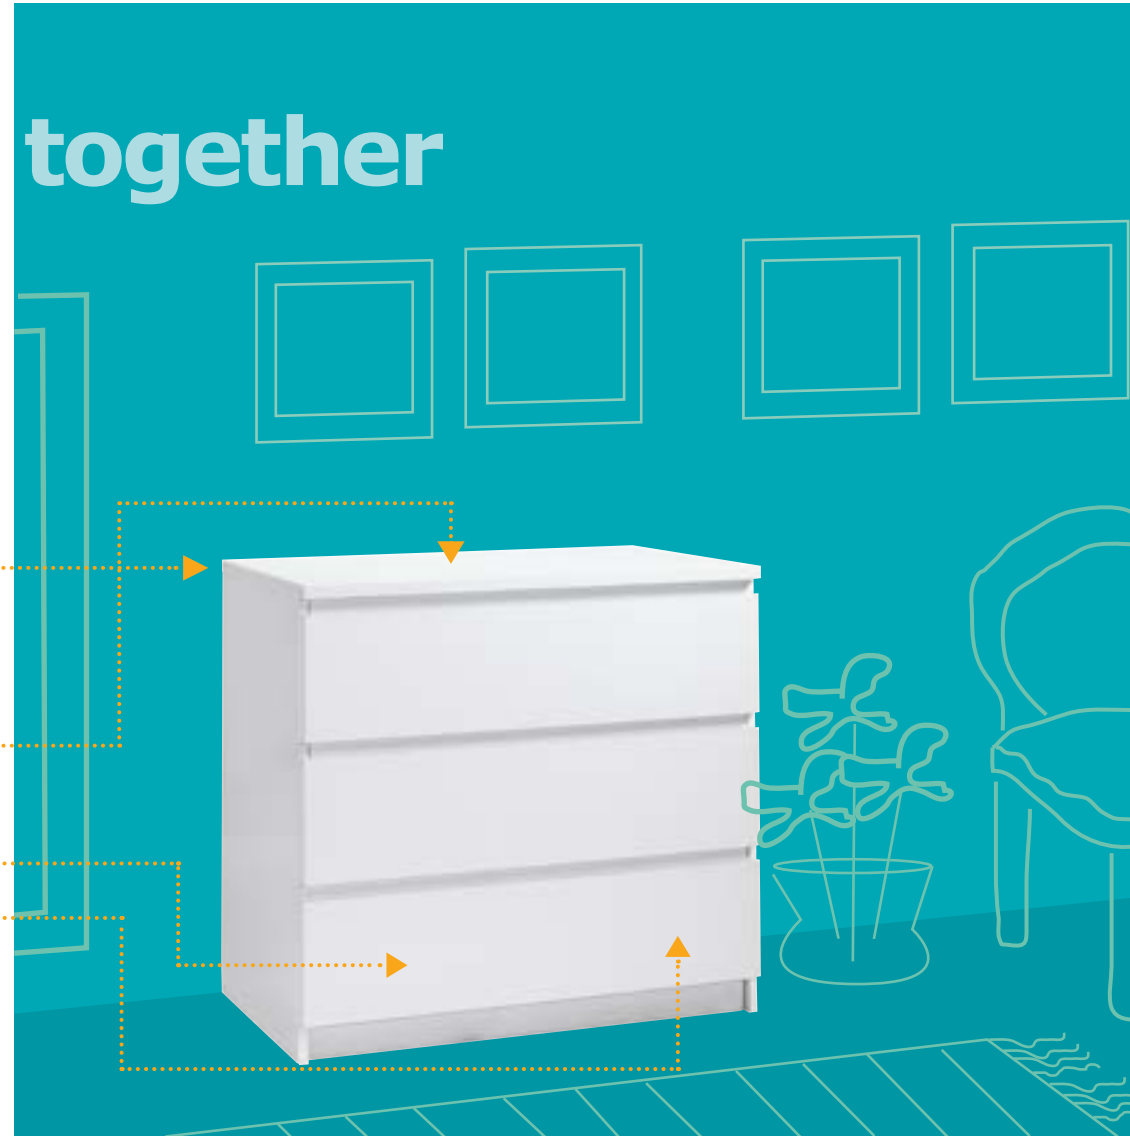

WALL ANCHORING GUIDE

IF YOUR WALL MATERIAL IS NOT LISTED OR IF YOU HAVE QUESTIONS, CONSULT WITH A LOCAL HARDWARE RETAILER.

WALL MATERIAL

Drywall or plaster with available wood stud

ANCHORING DEVICE

Screw inserted directly into stud. For example, a 5 mm wood screw provided with IKEA FIXA plug and screw set (Figure 1)

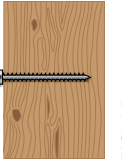 


FIGURE 1

WALL MATERIAL

Drywall without available wood stud

ANCHORING DEVICE

Plug with screw. For example, an 8 mm plug provided with IKEA FIXA plug and screw set (Figure 2)

 


FIGURE 2

WALL MATERIAL

Masonry

ANCHORING DEVICE

Solid Wall: Plug with screw. For example, an 8 mm plug provided with IKEA FIXA plug and screw set (Figure 3A)

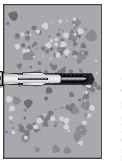 


FIGURE 3A

Hollow Wall: Toggle-style

(Figure 3B)

 


FIGURE 3B