


FANTAST



Design and Quality
IKEA of Sweden

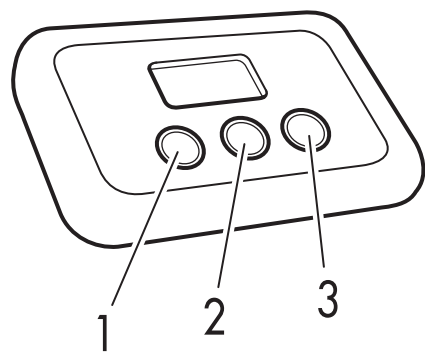

English

4

עברית

4

English

FANTAST is a combined meat thermometer and timer. To change modes, push the button on back to the right for timer (TIMER) or to the left for meat thermometer (COOK).

How to use the timer

Push the button on back of the timer to TIMER mode.

The display shows minutes (MIN) and seconds (SEC). To set minutes, press 2 (see picture). To set seconds, press 3.

To start and stop the timer: Press 1.

To reset the timer: Press and hold 2 and 3 simultaneously.

How to use the meat thermometer

- Push the button on back of the meat thermometer to COOK mode.
- Connect the cord to one side of the meat thermometer. The cord is heat resistant up to 250°C (480°F).
- The display shows the temperature in Celsius or Fahrenheit. To select the preferred temperature scale, press 1 (see picture).
- To set the desired temperature, press 2 (for higher temperature) or 3 (for lower temperature).
- Insert the probe on the cord into the food to be cooked. The temperature of the food is shown to the left on the display. When the food has reached the chosen temperature, the thermometer will beep.

Good to know

- The timer can be set to max. 99 minutes and 59 seconds. The meat thermometer can be set to max. 250°C (480°F).
- The timer can be started even if no time is selected (press 1). It will then count upwards without ringing. When it has counted up to the limit it will start all over from 0 again.
- The timer/meat thermometer has a magnet on back to stick on to a fridge for example.
- Operated by one LR03 AAA 1.5 V battery (not included).



ENVIRONMENTAL DISPOSAL INSTRUCTIONS

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

עברית

FANTAST משלב שעון עצר ומד-חום לבשר במכשיר אחד. לחצו על הכפתור בגב המכשיר ימינה כדי להפעיל את שעון העצר (TIMER), או שמאלה להפעיל מד-החום (COOK).

הוראות שימוש בשעון העצר

- לחצו על הכפתור בגב השעון המעביר אותו למצב TIMER.
- על התצוגה יופיעו הדקות (MIN) והשניות (SEC). לכיוון הדקות, לחצו על 2 (ראו שרטוט). לכיוון השניות לחצו על 3.
- להפעלת ועצירת שעון העצר: לחצו 1.
- לאיפוס שעון העצר: לחצו ברציפות ובו זמנית על כפתורים 2 ו-3.

הוראות שימוש במד חום

- לחצו על הכפתור בגב המד-חום המעביר אותו למצב COOK.
- חברו את הכבל לצד אחד של המד-חום. הכבל עמיד בפני חום מרבי של 250 מעלות.
- על התצוגה תופיע הטמפרטורה בצלסיוס או פרנהייט. לבחירת יחידת המידה, לחצו 1 (ראו שרטוט).
- לכיוון הטמפרטורה הרצויה, לחצו 2 (לטמפרטורות גבוהות) או 3 (לטמפרטורות נמוכות).
- הכניסו את קצה הכבל למזון המיועד לבישול. דרגת החום תוצג מצידו השמאלי של מסך התצוגה. כאשר המזון הגיע לטמפרטורה הרצויה, המד-חום ישמיע צפצוף.

טוב לדעת

- ניתן לכוון את שעון העצר ל- 99 דקות ו- 59 שניות. ניתן לכוון את מד החום לדרגת חום מרבית של 250 מעלות צלסיוס.
- ניתן להפעיל את שעון העצר גם אם לא כוון זמן יעד (לחצו 1). במצב כזה שעון העצר ימנה את הדקות בלי לצפצף. כאשר יגיע לדקה האחרונה, יתחיל השעון את הספירה מחדש.
- מד החום/שעון העצר כולל מגנט בגבו, על מנת שניתן יהיה להצמידו למקרר למשל.
- המכשיר מופעל על ידי סוללת 1.5V AAA LR03 (נמכרת בנפרד).



הנחיות לטיפול בפסולת

סמל הפח המחוקק בעל הגלגלים מצביע על כך שיש להשליך את המוצר לאשפה בנפרד מהפסולת הביתית הרגילה. המוצר צריך להימסר למחזור בהתאם לתקנות איכות סביבה מקומיות לסילוק פסולת. באמצעות הפרדת מוצר זה מן הפסולת הביתית, תעזרו להפחית את כמות הפסולת המועברת למשפחה או מטמנות ולמזער את ההשפעה השלילית על בריאות האנשים והסביבה. לקבלת מידע נוסף, אנא צרו קשר עם חנות איקאה הקרובה לבייתכם.